

# Equipment Pad

## Installation Guide


### Instructions for Replacing an Enclosure with Conduits already installed

#### Required Items

- Equipment Pad
- Hand Tamper
- Shovel
- 48" Level

#### 1. Site Preparation And Installation

- 1.1.** Locate the conduits and level the area where the pad is to be placed.
- 1.2.** If the installation location is on a slight hillside, the hillside must be excavated. Use minimal fill dirt and compact any fill dirt used.
- 1.3.** Tamp all disturbed dirt, especially in the trench area.
- 1.4.** Make sure that the contact area for the pad is level and set the pad, ensuring complete contact between the soil and the bottom of the pad.

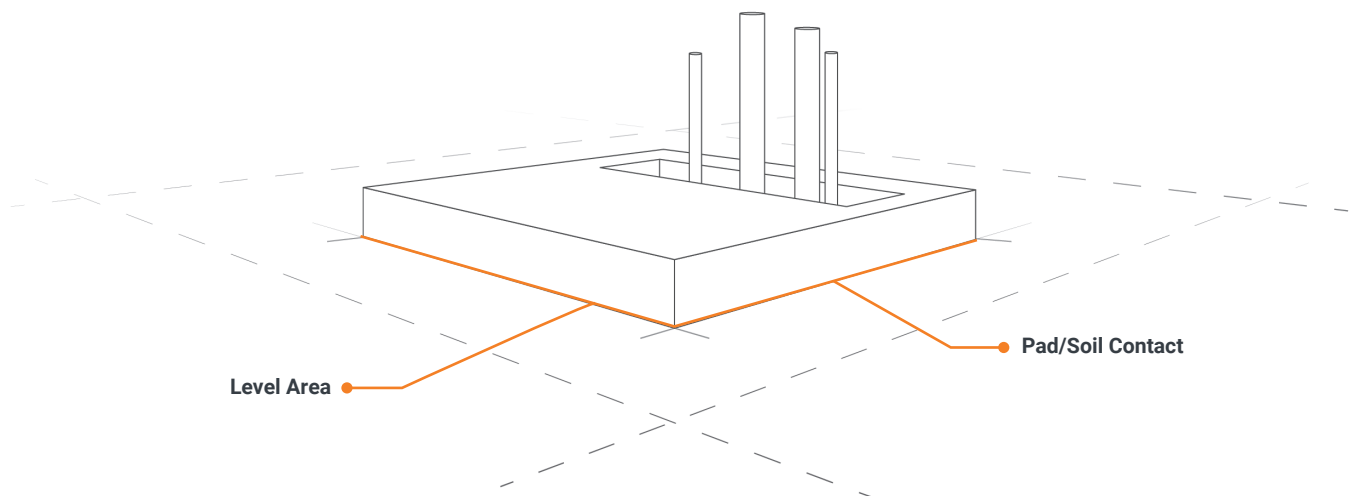

# Equipment Pad

## Installation Guide

---

### Instructions for Replacing an Enclosure with Conduits already installed

---

#### Important Safety Tips

- **Wear personal protective equipment (PPE )including safety boots, gloves, hard hats, and eye protection.**
- **Call 811 or your local utility locator service before you dig to prevent accidental damage to underground lines.**
- **Always use proper lifting techniques and equipment. For heavy pads, utilize team lifting or appropriate mechanical assistance.**
- **Install only on stable, level ground. Unstable or sloped surfaces may cause shifting.**
- **Secure the work area. Clearly mark and secure the installation site to ensure worker and public safety.**
- **Do not modify or alter the pad. Modifying or altering the pad may compromise its structural integrity.**